



Select the setting folder

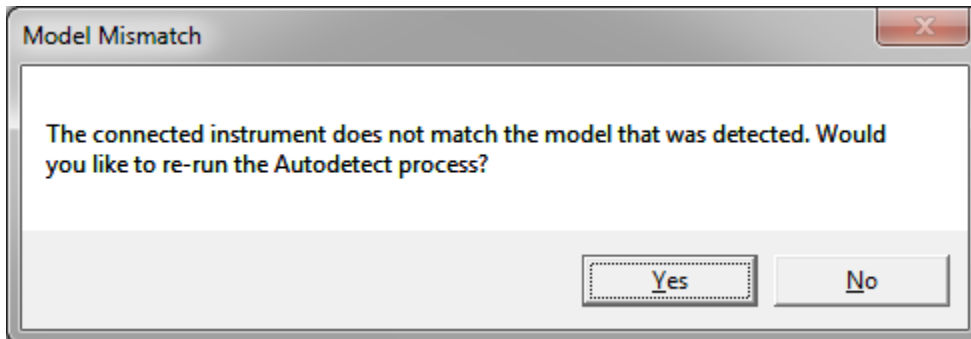

You will get a message that looks like this. Select **No**

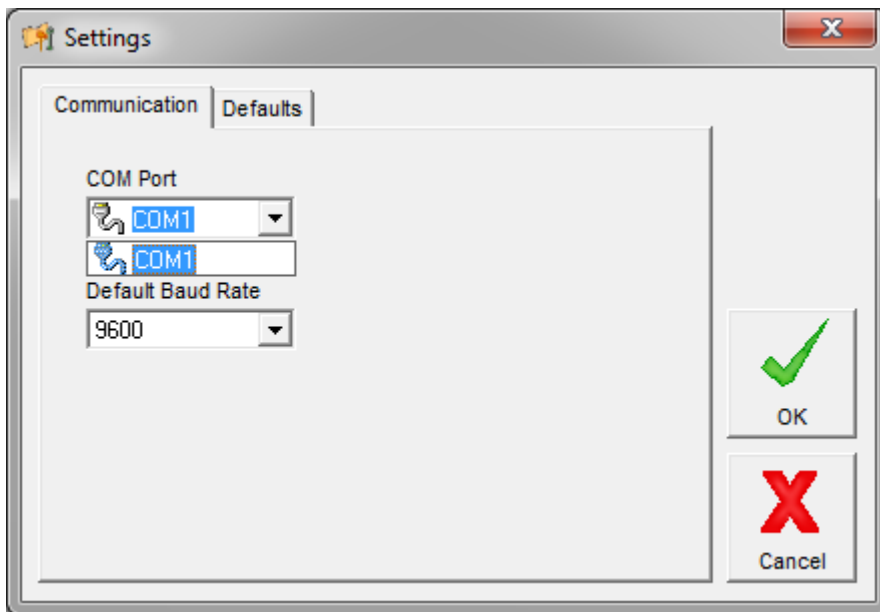

You will then need to select the com port that unit is connected to. Note if you are using a USB to serial adapter it can be any com port.

