2465 Piston Gauge with Autofloat Controller Initialize Test Example in COMPASS for Pressure



This procedure is intended for Fluke Calibration customers trained on use of 2465 Piston Gauge, 2465 Autofloat Controller and COMPASS for Pressure Calibration Software.


Purpose


This document instructs how to initialize a manual test or test definition in COMPASS for Pressure when using a 2465 Piston Gauge with Autofloat Controller. Also see document "2465 Piston Gauge with Autofloat Controller Setup in COMPASS for Pressure" and other documents in the Knowledge Base.


Instructions

Setup the piston-cylinder, mass set and trim mass set (if applicable) setup files first so they can be chosen in the Autofloat controller setup. See page 3 for examples.


2465 Test Initialization

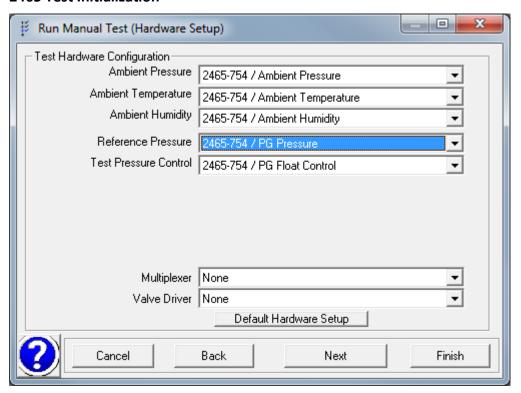


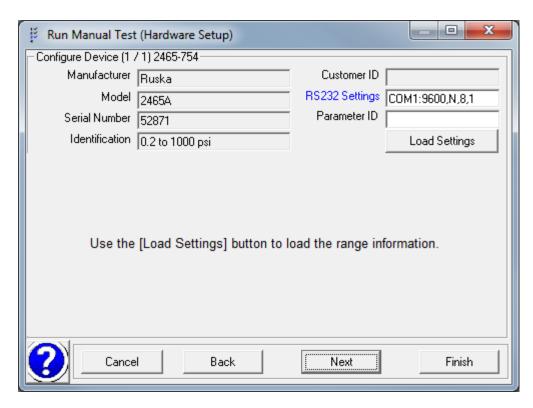


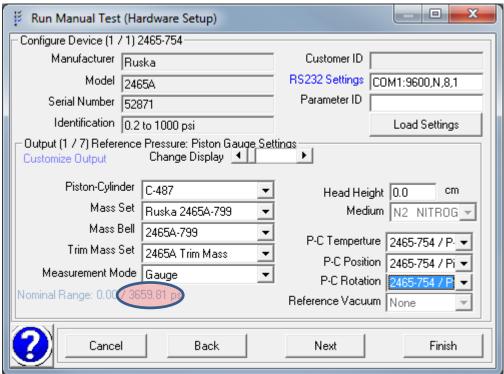


Nominal Range treats trim mass as kg instead of g. This will be fixed in the next COMPASS release. This only affects this window, not the metrological values when COMPASS is running. To see the true Nominal Range temporarily select None for Trim Mass Set.

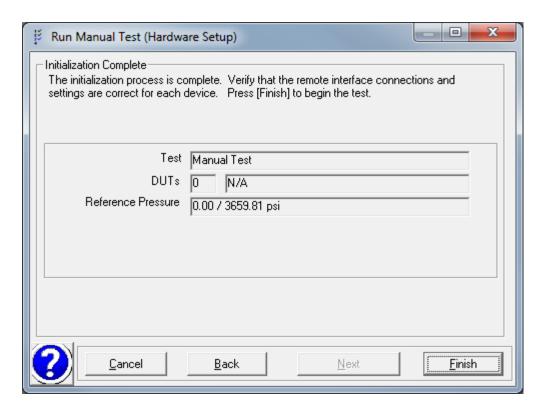

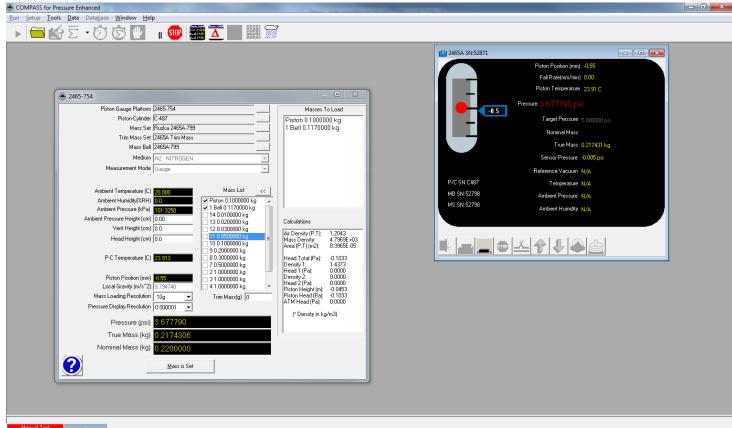

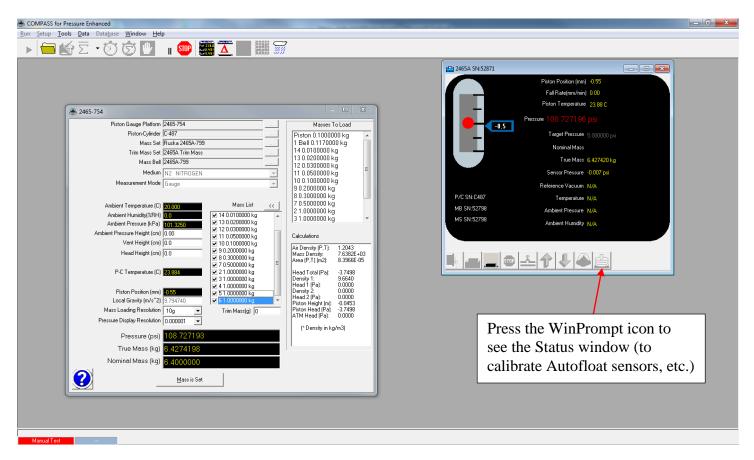

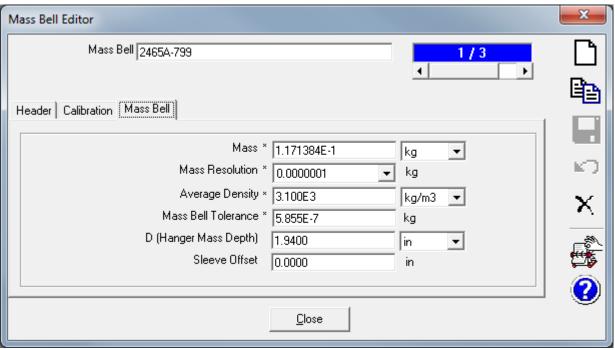

End of Procedure

Fluke Calibration. Precision, performance, confidence.™



Phone: 1 (877) 355-3225

Email: pressuresupport@flukecal.com