

hxn306.eps

Figure 1. PCM Block Diagram

Vent Test Valve (B3-VT)

Vent Ref Valve (G3-VR)

When the system is in Vent mode, the valves are open. In other modes, such as Control and Measure, the valves are Closed. Note that the REF port is open to atm unless something is externally connected to it.